

## How to Config HM-12、 HM-13 UUID

### 一、 HM-12、 HM-13 Default UUID value

UUID: FFE0

0xFFE1

Properties: Read Write Without Response Notify

Service UUID

0xFFE0

Characteristic 1 UUID

0xFFE1 ( Read , Notify, Write\_Without\_Response )

### 二、 If you want to use two Characteristic UUID

Please use AT+FFE21 command to open it, After reset module,  
module will use two Characteristic UUID

Service UUID

0xFFE0

Characteristic 1 UUID

0xFFE1 (Read , Notify,)

0xFFE2 (Write\_Without\_Response)